

Read and save these instructions

Do not turn radiators upside-down during operation

 
 
 
 
 
INTRODUCTION

Thank you for purchasing our Oil-filled Heater. Each unit has been manufactured to ensure safety and reliability. Before first use. Please read the instructions carefully and keep them for further reference.

ASSEMBLY

Remove the heater and all the accessories from the carton.

1. Turn the heater upside down.
2. Position the wheel base assemblies between the end fins.
3. Attach them to the heater using the U-bolts and wing nuts supplied.
4. Tighten the wing nuts.
5. Turn the heater the right way up.

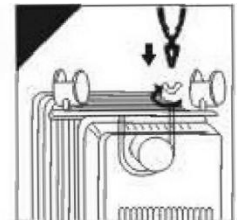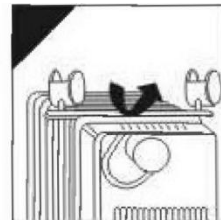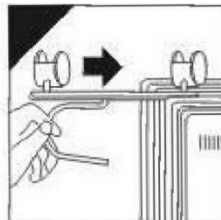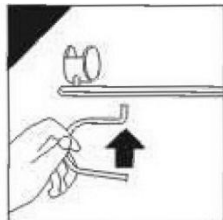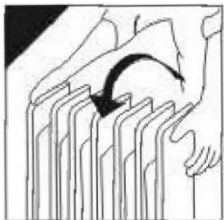

PARTS DESCRIPTION

1. Power setting switch
2. Thermostat control
3. Handle
4. Oil filled fins
5. Castors
6. Cord storage

 
OPERATING YOUR OIL-FILLED HEATER

Place the heater on the floor at least 90cm away from the wall and any other objects such as furniture, Curtains or plants.

Operation

Insert the plug into a suitable socket outlet on an A.C. power supply having the same voltage as that shown on its rating label.

The touch screen buttons located on the product correspond to the remote control functions:

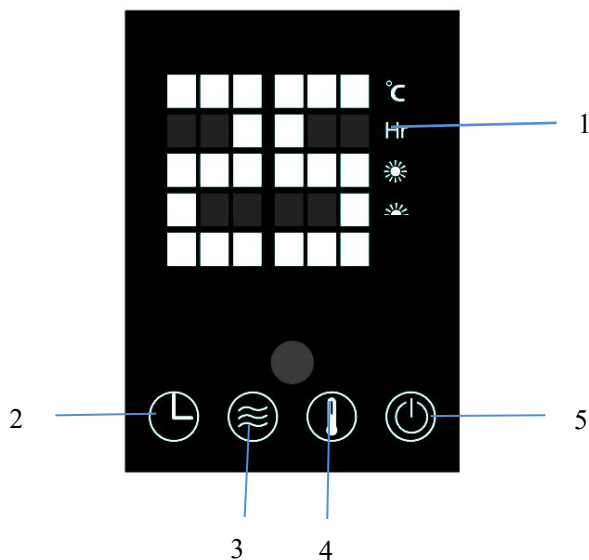

1. Display
2. Timer button
3. Power Setting button
4. Temperature button
5. NO/OFF button

Power function

Before you working the heater,your should turn on the switch in side.

Press “” to set functions. The upper part of the display shows the room temperature

Mode

Press “” to regulate low/high power setting , “” icon light on means the appliance working in low setting, “” icon light on means the appliance working in high power level.

Temperature selection

Press “” button to select the desired temperature from a range of 5°-45°C. The temperature indicator will remain lit for a long time.After operation few seconds,the display will shows the room temperature again.

Timer

Press the timer button””, to select the desired range between 1 hour to 24 hours.

Child clock

Press “”+ “” together both , “CL” icon will be display on the screen,That’s means the Child clock function be opened,so you can not make any operate,and same ways to touch to delete the child clock function.

Screen automatically dimmable function

If not operate the appliance exceed 3 minutes, the screen display dimmable 50% rate than normally.

Frost function button

The appliance build within frost function system, and only can be operated by remote control



“” button, then “Fr” icon will be display if the function be opened. Under this function system, the appliance will be automatically heating in low power setting mode when the detector be test the room temperature lower than -5 degree, and will stop heating when the room temperature higher than 5 degree.



 
U can delete the function to press the “” one more time by remote control, or to delete to touch control panel in any button, then “Fr” icon will be disappear.

Operation for Remote Control

Insert the plug in a suitable power socket.

The touch screen buttons located on the product correspond to the remote control functions:

1. Temperature button
2. Power setting button
3. Child lock button
4. Timer button
5. Frost function button
6. NO/OFF button

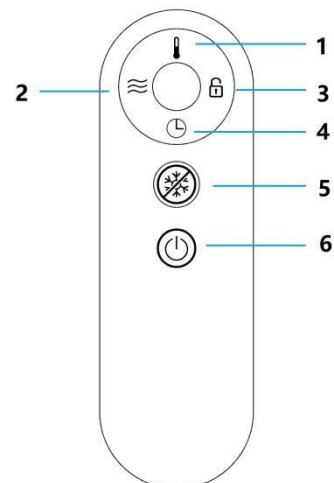

CLEANING YOUR OIL-FILLED HEATER

1. Always disconnect the heater from the mains supply before cleaning.
2. Clean the outside of the heater by wiping with a damp cloth and buff with a dry cloth.
3. DO NOT use waxes or polishes as these may react with the heater and cause discoloration.

STORING YOUR OIL-FILLED HEATER

1. Save the box for off season storage.
2. Clean the heater following the cleaning instructions above.
3. Remove the wheel base assemblies.
4. Place the heater, and wheel assemblies in the original box, and store in a cool and dry place.
5. If you choose to store your heater fully assembled be sure to cover it to protect it from dust.

IMPORTANT SAFEGUARDS

1. Read the instructions carefully before use and save them for future reference.

2. To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.
3. Do not place the heater near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the heater.
4. Always unplug heater when not in use. (This item may be omitted if the heater is provided with a clock-operated switch).
5. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
6. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
7. Check your heater cord and plug connections:
 - a) Faulty wall outlet connections or loose plugs can cause the outlet or plug to overheat. Be sure the plug fits tight in the outlet.
 - b) Heaters draw more current than small appliances, overheating of the outlet may occur even if it has not occurred with the use of other appliances.
 - c) During use check frequently to determine if your plug outlet or faceplate is HOT!
 - d) If so, discontinue use of the heater and have a qualified electrician check and/or replace the faulty outlet(s).
8. Always disconnect the heater from the main supply when not in use and when cleaning.
9. Do not leave the heater "ON" unattended.
10. Never cover the heater as this may lead to risk of fire.
11. Keep the heater a distance of at least 90cm from any combustible material, such as furniture, curtains, bedding clothes or papers.
12. Do not attempt to open any part of the oil fins.
13. Keep the heater clean. Do not allow objects to enter the ventilation, as this may cause electric shock, fire or damage the heater.
14. Close supervision is required when any appliance is used near or by children.
15. Never allow the cord to touch wet or hot surfaces, become twisted or be within the reach of children.
16. Do not use outdoors.
17. Do not place on or near a hot gas or electric burner.
18. Never use the appliance with a damaged cord or plug or after the appliance has malfunctioned or been damaged in any way.
19. Never attempt to open any part or dismantle the controls. Responsibility for failure cannot be accepted if these instructions have been ignored.
20. Do not use the appliance for anything other than its intended use.
21. This appliance is intended for household use only.
22. Regulations concerning the disposal of the oil when scraping the appliance have to be followed.
23. Any repairs that need to be done to the heater must be referred to an authorized service agent only.
24. The appliance is not intended for use by young children or infirm persons without supervision.
25. Young children should be supervised to ensure that they do not play with the appliance.
26. If the supply cord is damaged, it must be replaced by the manufacturer or its service

agent in order to avoid a hazard.

27. The heater must not be located immediately below a socket-outlet.

28. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

29. This heater is filled with a precise quantity of special oil. Repairs requiring opening of the oil container are only to be made by the manufacturer or his service agent who should be contacted if there is an oil leakage. Regulations concerning the disposal of the oil when scrapping the appliance has to be followed.

30. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

31. Children should be supervised to ensure that they do not play with the appliance.

Disposal Information



Separate collection.

This symbol means the product must not be discarded with the general household waste. There is a separate collection system for these products.

Should you want to dispose of this item please do not put it with the household waste. Used electrical and electronic equipment and batteries must be made available for separate collection.

Private households may return their used electrical and electronic equipment to designated collection facilities free of charge. Identify where your local collection points are and return the product there. (Facilities are usually available at the municipal waste site, your electrical retailer, or your local authority may provide separate collection from the household.)

By disposing of this product correctly you will be providing positive help to the environment.