

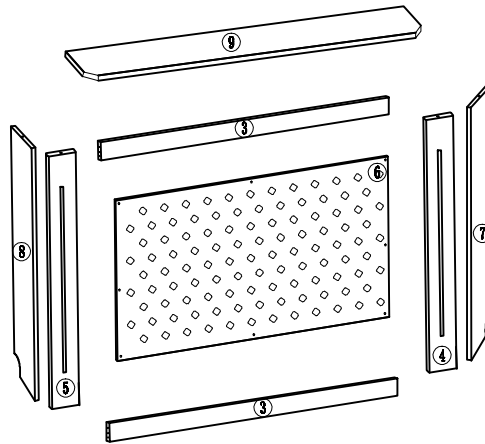



Instruction Manual

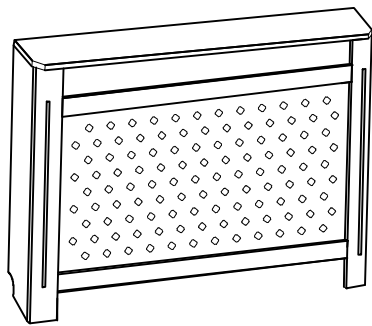


Tools needed



churn drill



hammer




cross screwdriver


Please note that there is no No.1 and No.2 panel !




③ x2 872*105*12mm

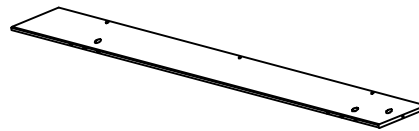


④ x1 803*110*12mm

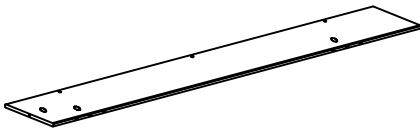


⑤ x1 803*110*12mm

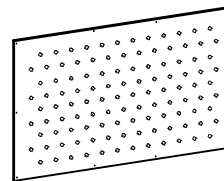


⑥ x1 910*479*3mm

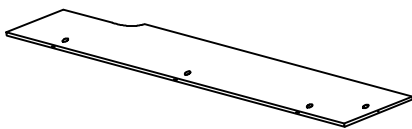

⑦ x1 803*168*12mm

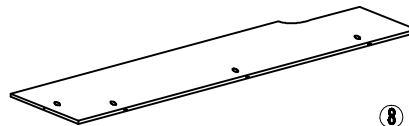

⑧ x1 803*168*12mm

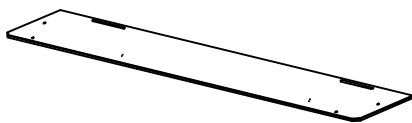

⑨ x1 1120*190*12mm



Ax2



Bx14



Cx14



Dx8



Ex10



Fx4



Gx4





Hx2




Ix8



Using a screwdriver, screw in the #B screws securely. Please do not over tighten as it may cause wood to splinter.
The small arrow on the #C Cam Locking Screw should be facing the #B screws extending from the panel.
Use screwdriver to tighten securely, but avoid over tightening, screws may protrude through the panel.



1 2

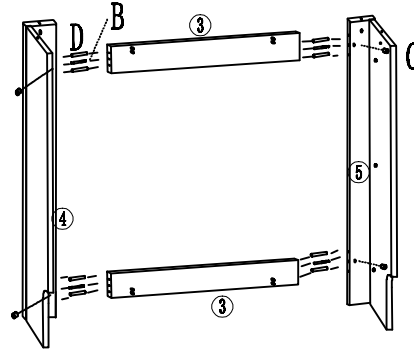


Bx6

Cx6


Bx4

Cx4

Dx8

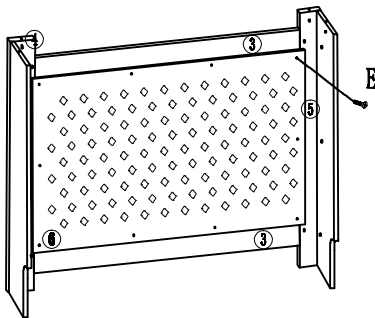


3 4

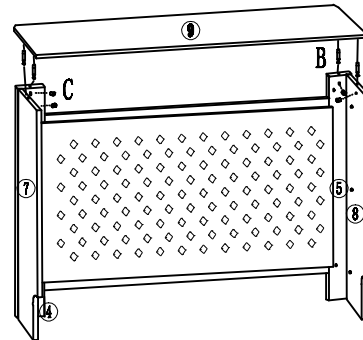


Ex10

Bx4

Cx4

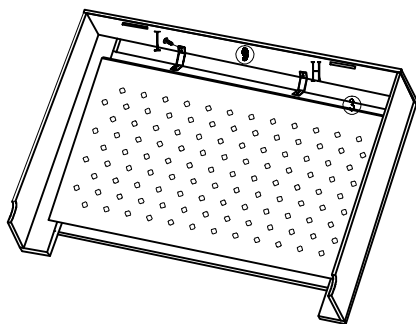

5 6

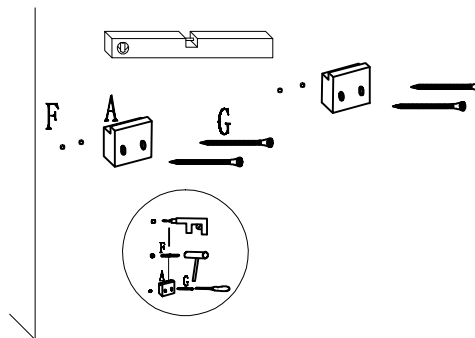

Hx2

Lx8

Ax2

Fx4

Gx4



7

