

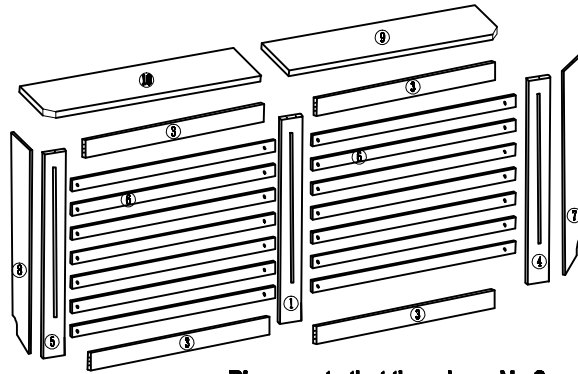


Instruction Manual

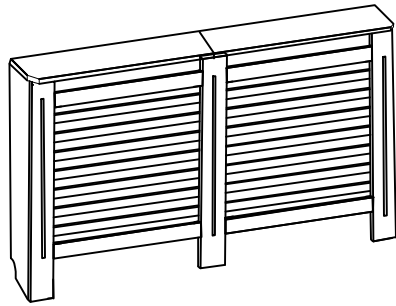


Tools needed



churn drill




hammer




cross screwdriver


Please note that there is no No.2 panel !

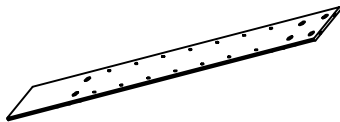


① x1 803*110*12mm

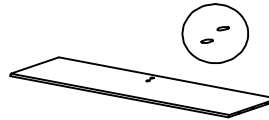


③ x4 581*105*12mm




④ x1 803*110*12mm




⑤ x1 803*110*12mm




⑥ x14 641*37*9mm

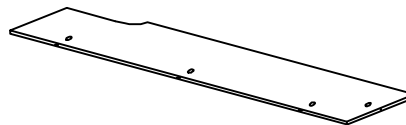


⑦ x1 803*168*12mm

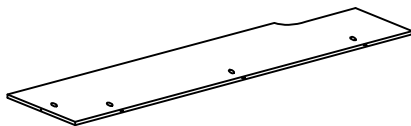

⑧ x1 803*168*12mm

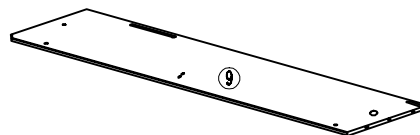


⑨ x1 760*190*12mm

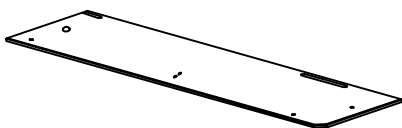

⑩ x1 760*190*12mm



Ax3



Bx20



Cx22



Dx18



Ex28



Fx6



Gx6



Hx2




Ix8



Jx1




Using a screwdriver, screw in the #B screws securely. Please do not over tighten as it may cause wood to splinter.
The small arrow on the #C Cam Locking Screw should be facing the #B screws extending from the panel.
Use screwdriver to tighten securely, but avoid over tightening, screws may protrude through the panel.

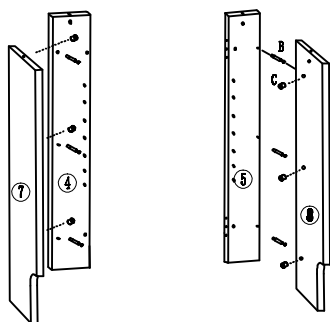

1 2

Bx6


Cx6

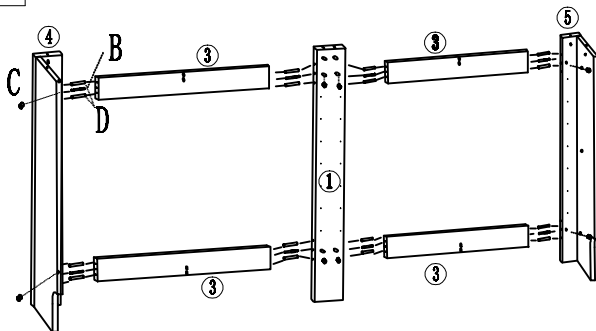

Bx8


Cx8

Dx16

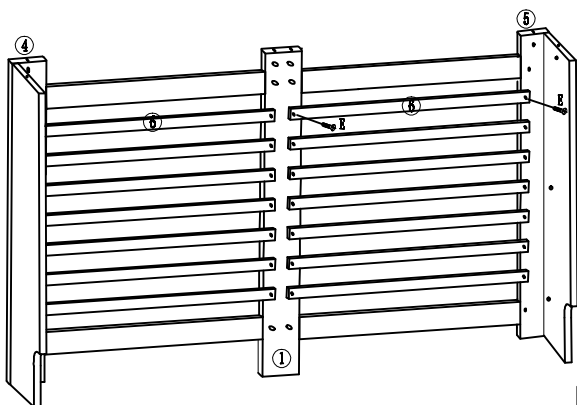

3 4

Ex28

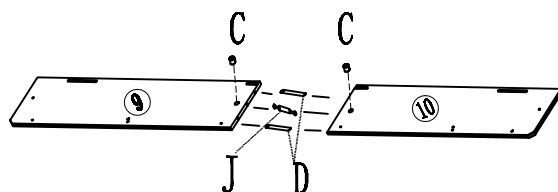

Cx2


Dx2

Jx1




Keep the panels 9&10 on the same level when moving or the screws may protrude through the panels.

5 6

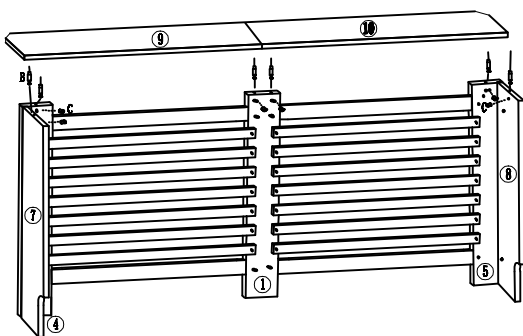

Bx6


Cx6

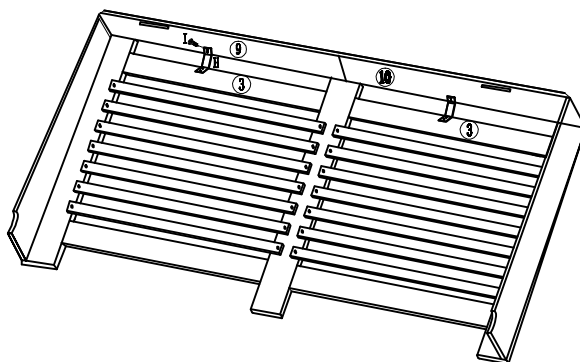

Hx2

Lx8

7 8

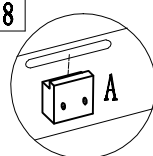

Ax3

Fx6

Gx6

