

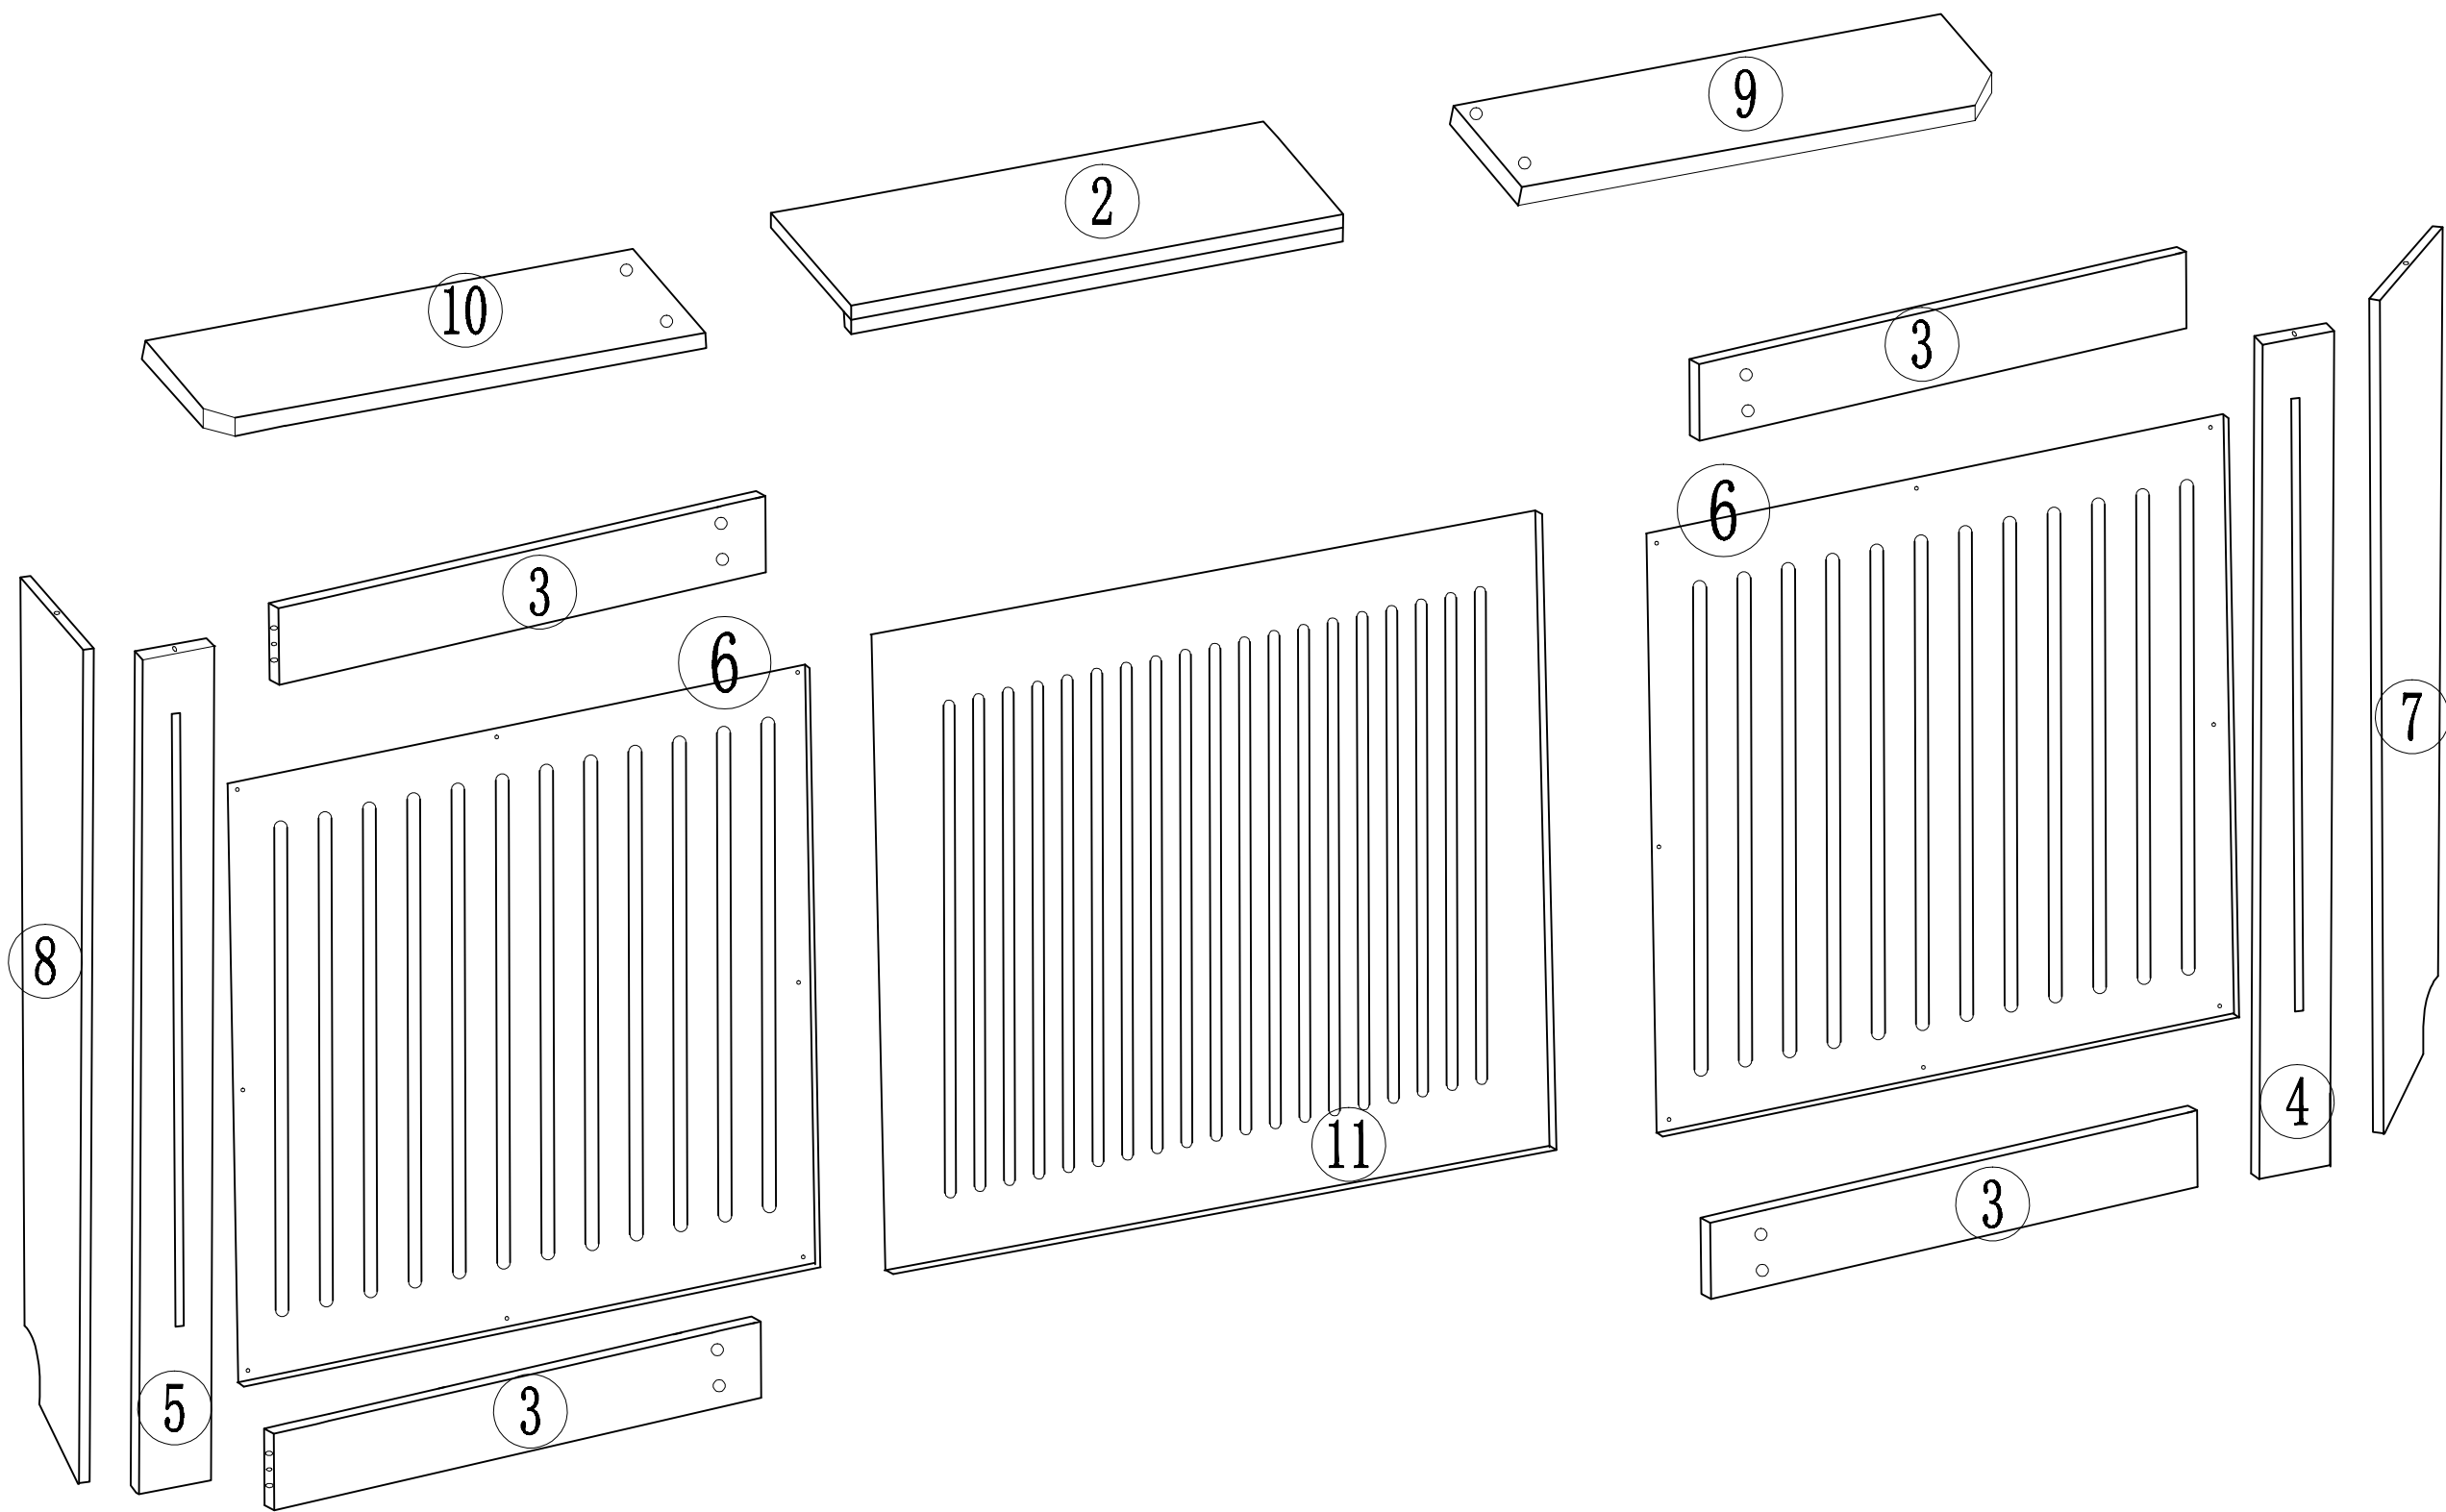


Instruction Manual

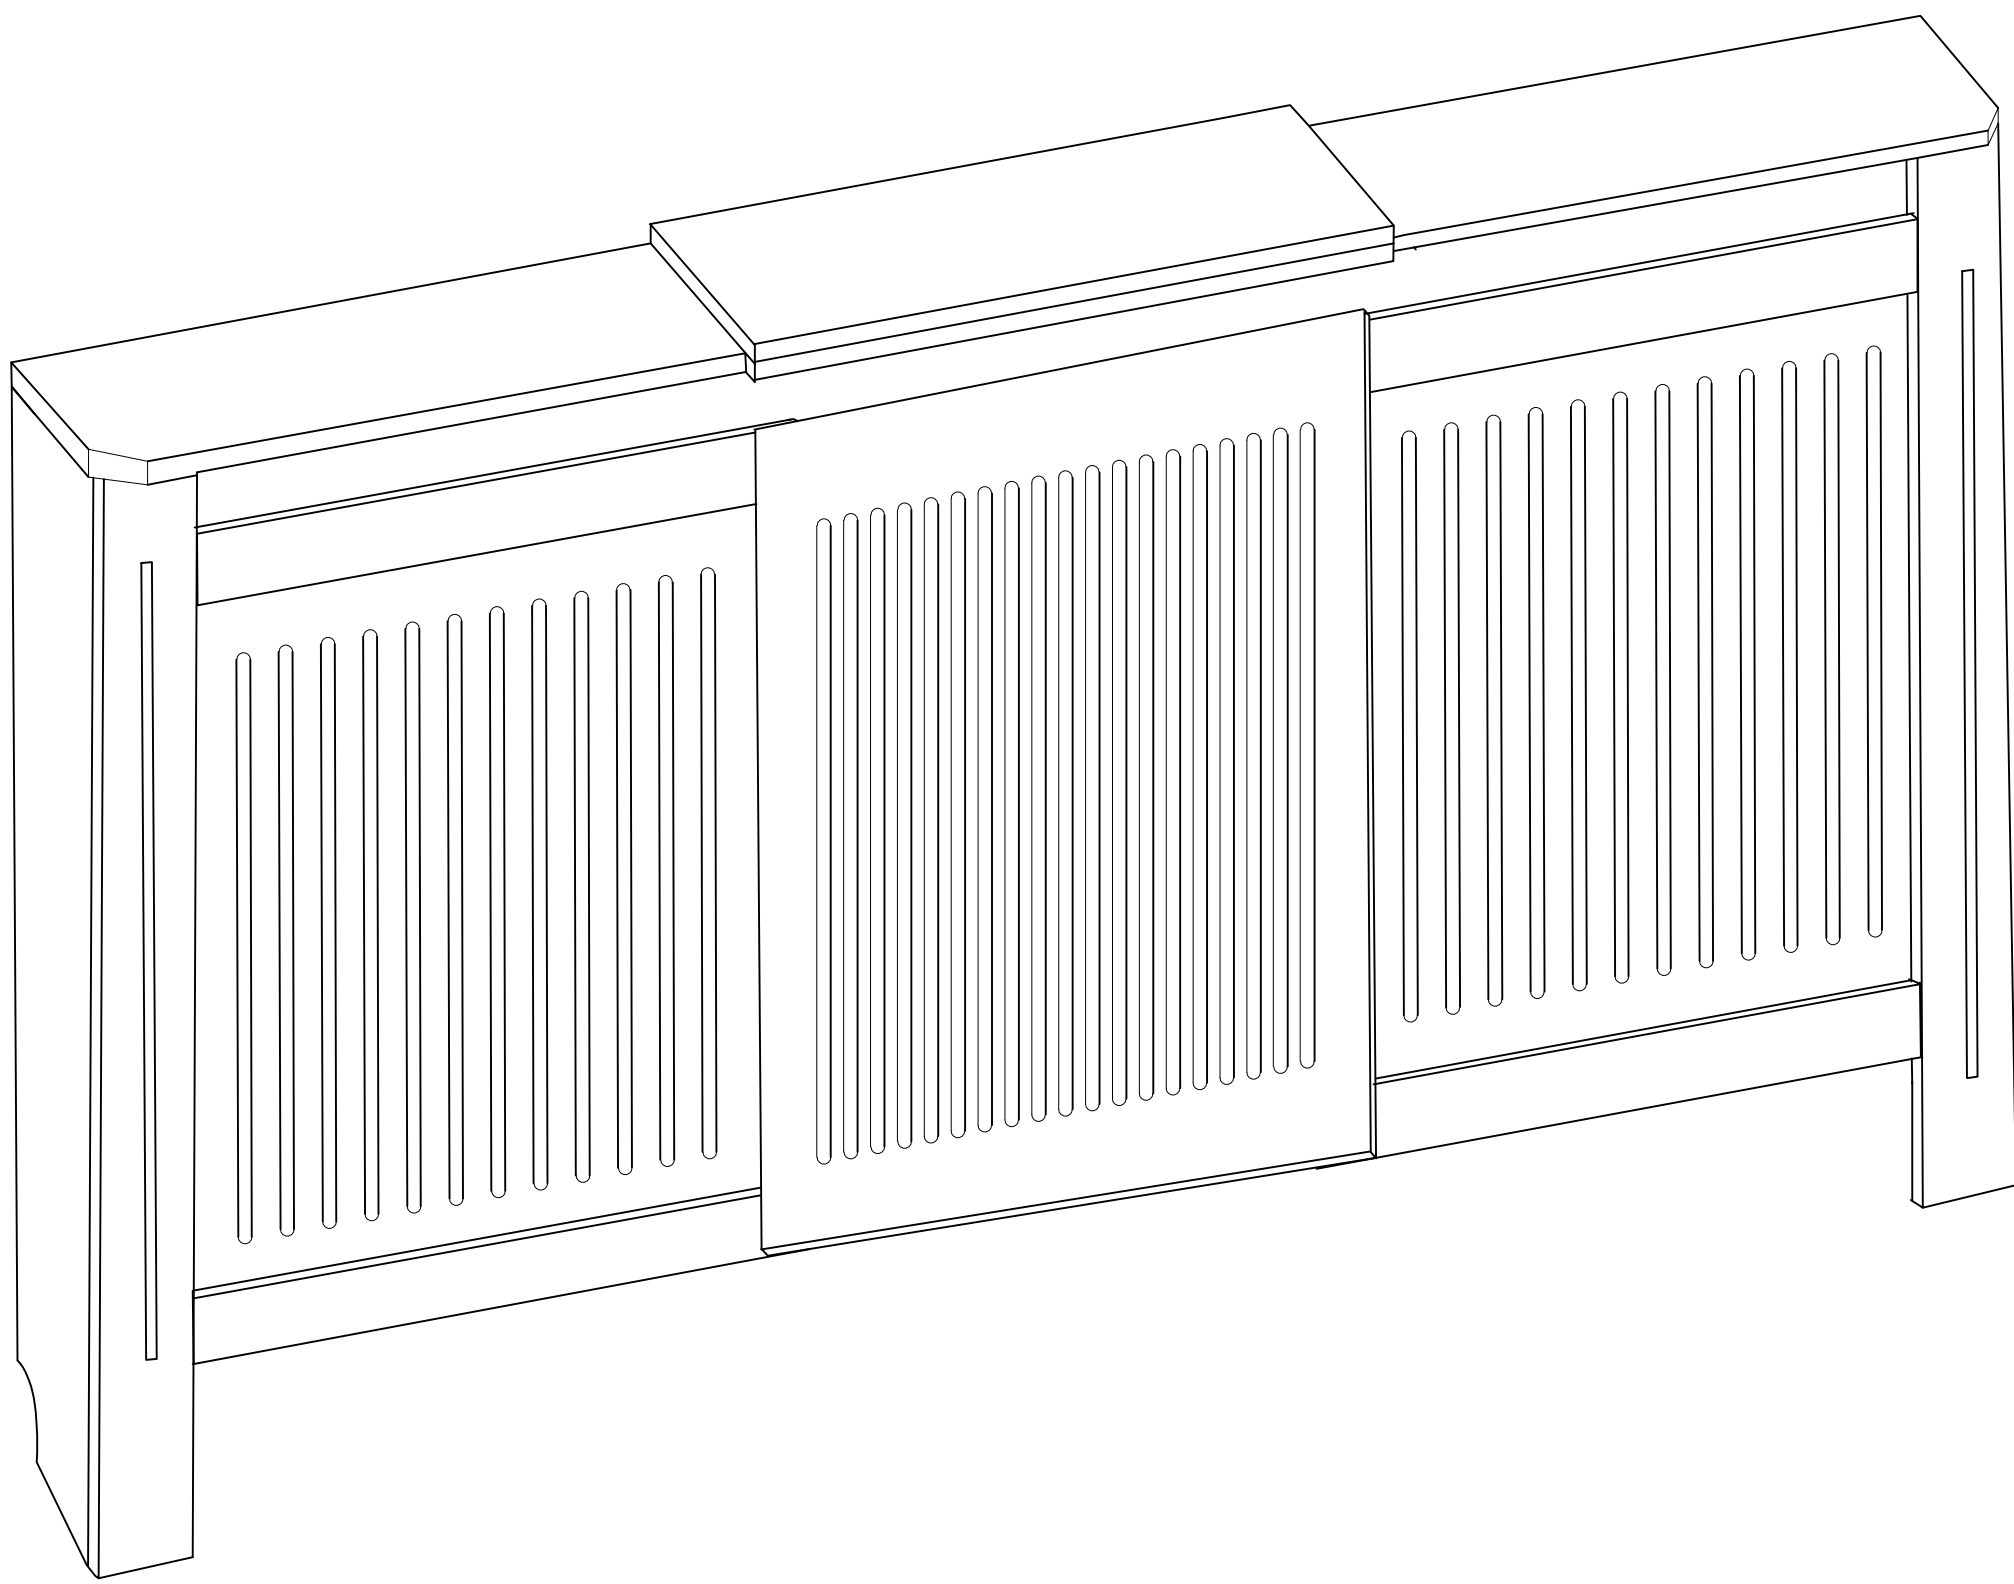


Please note that there is no No.1 panel !


Tools needed

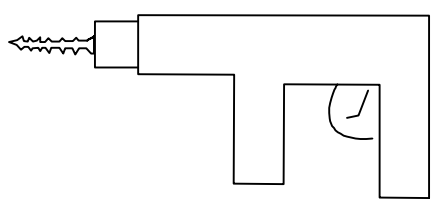


churn drill

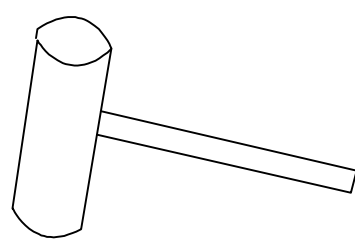


hammer




cross screwdriver

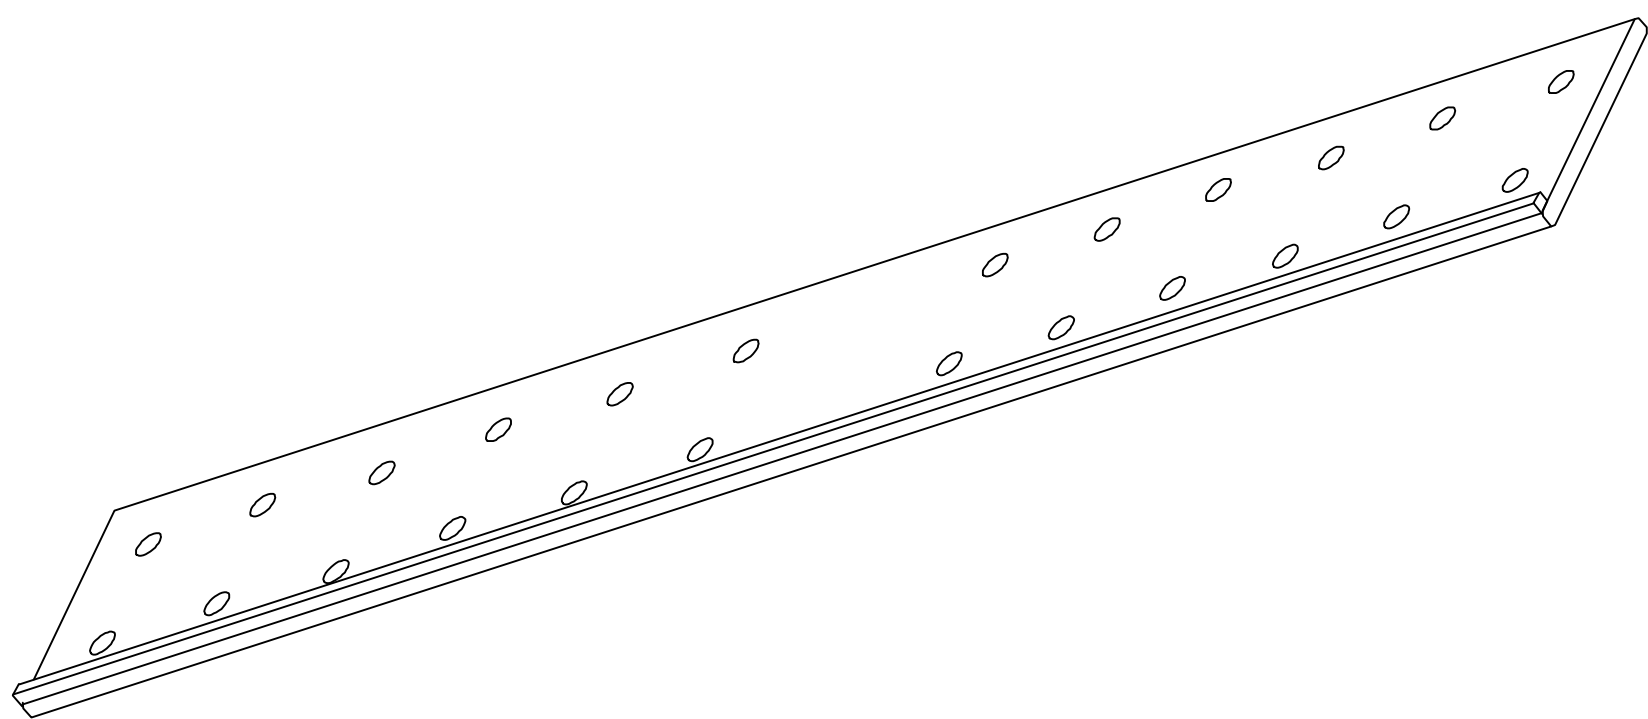


② x1 850*205*24mm

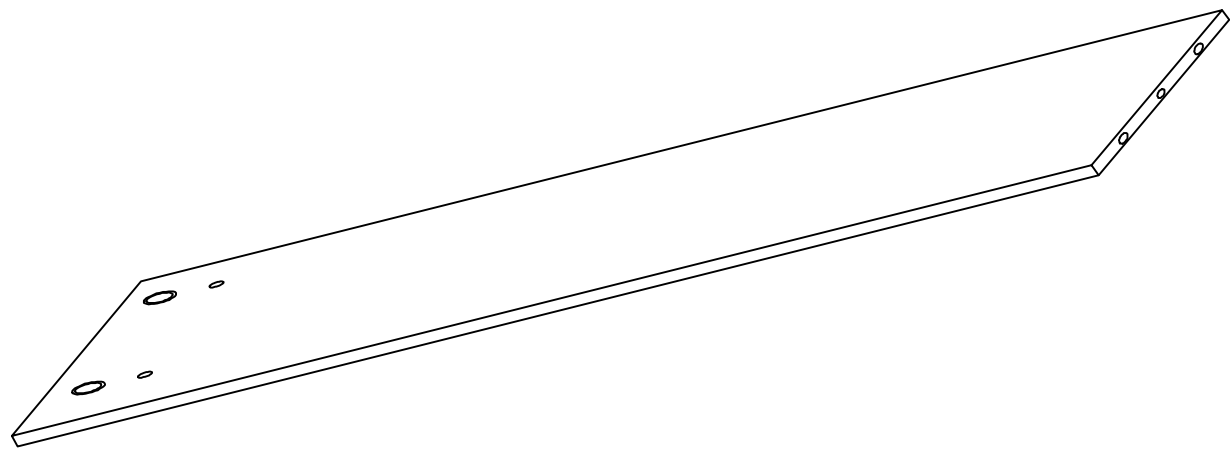


③ x4 550.5*105*12mm

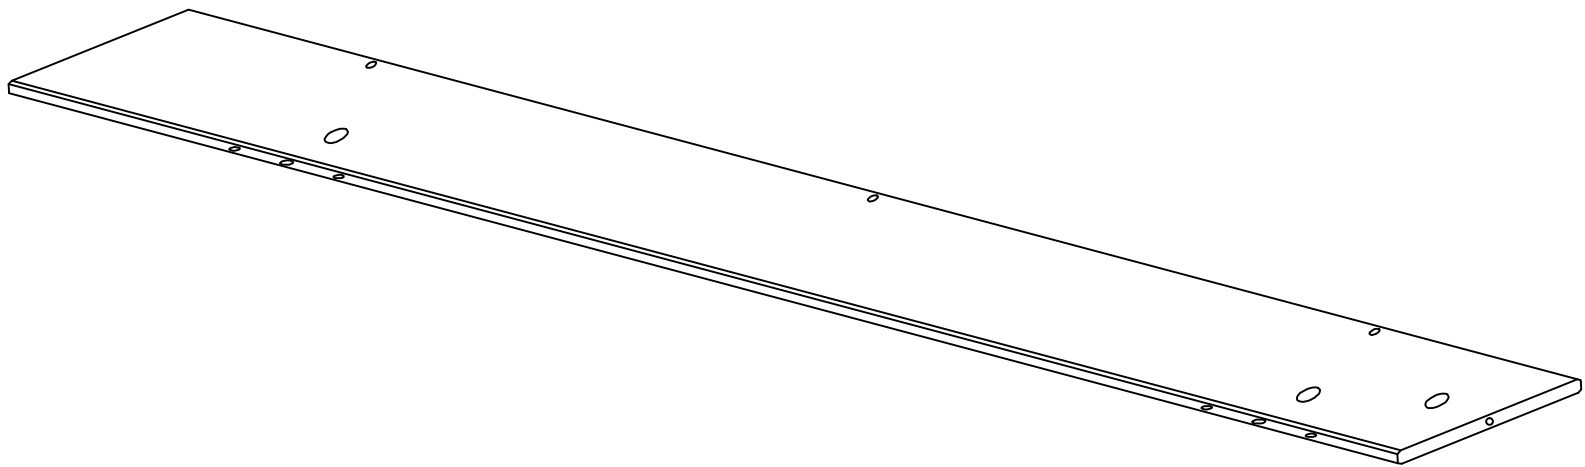


④ x1 803*110*12mm

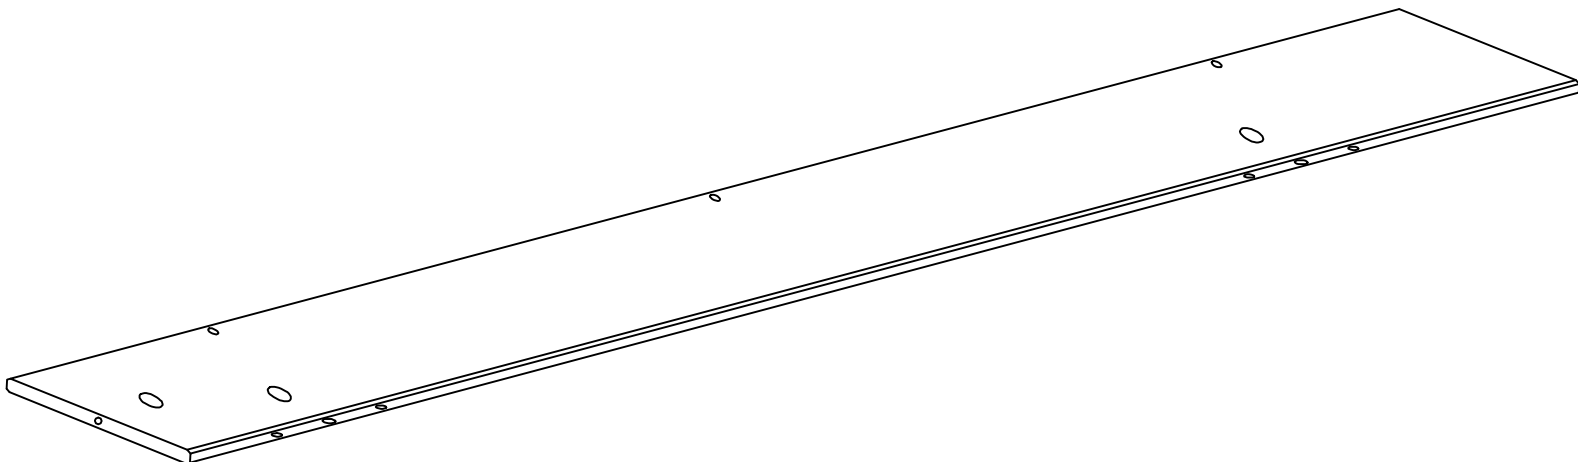


⑤ x1 803*110*12mm

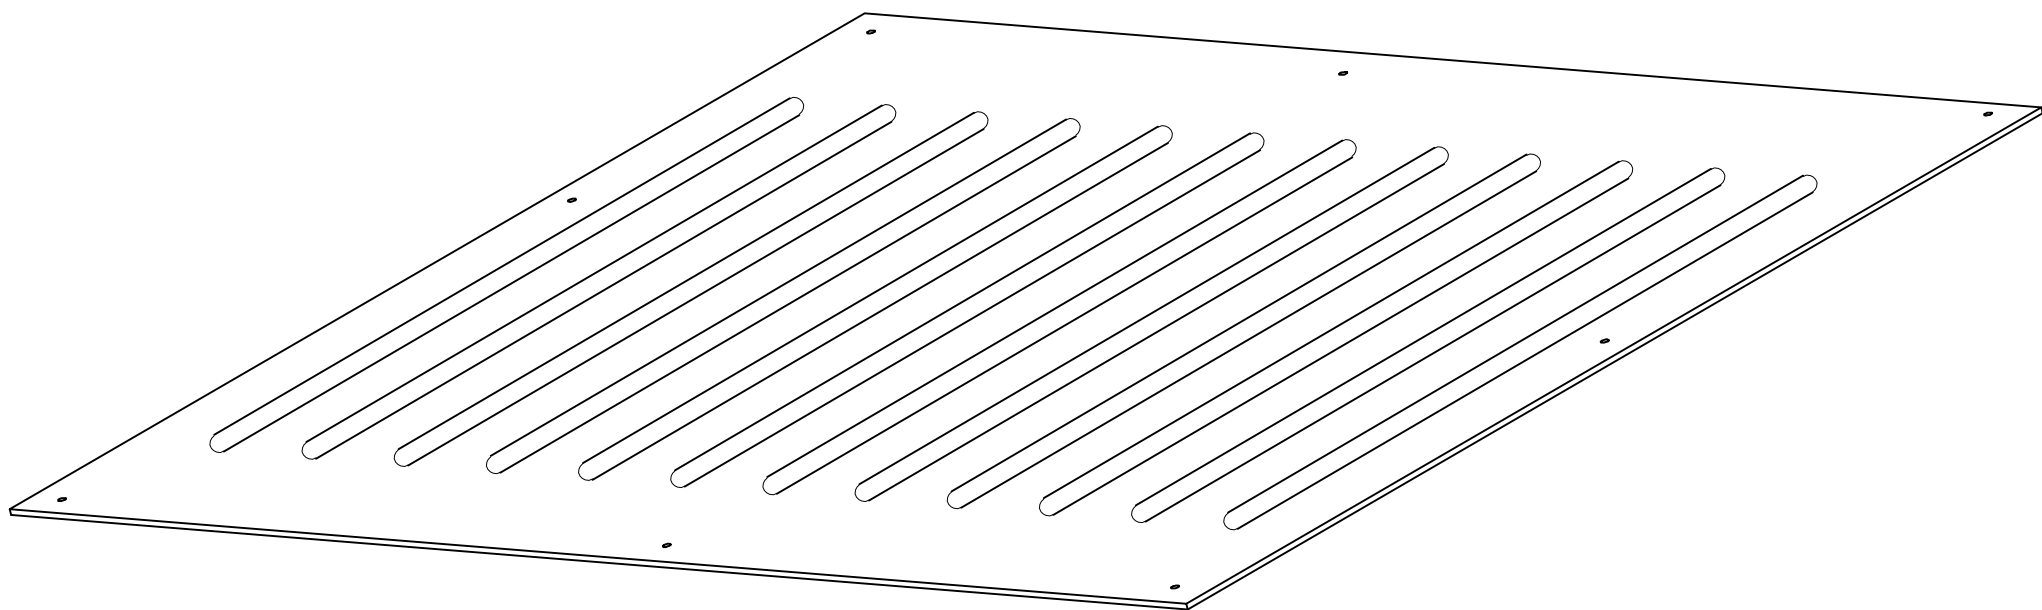


⑥ x2 540*479*5mm

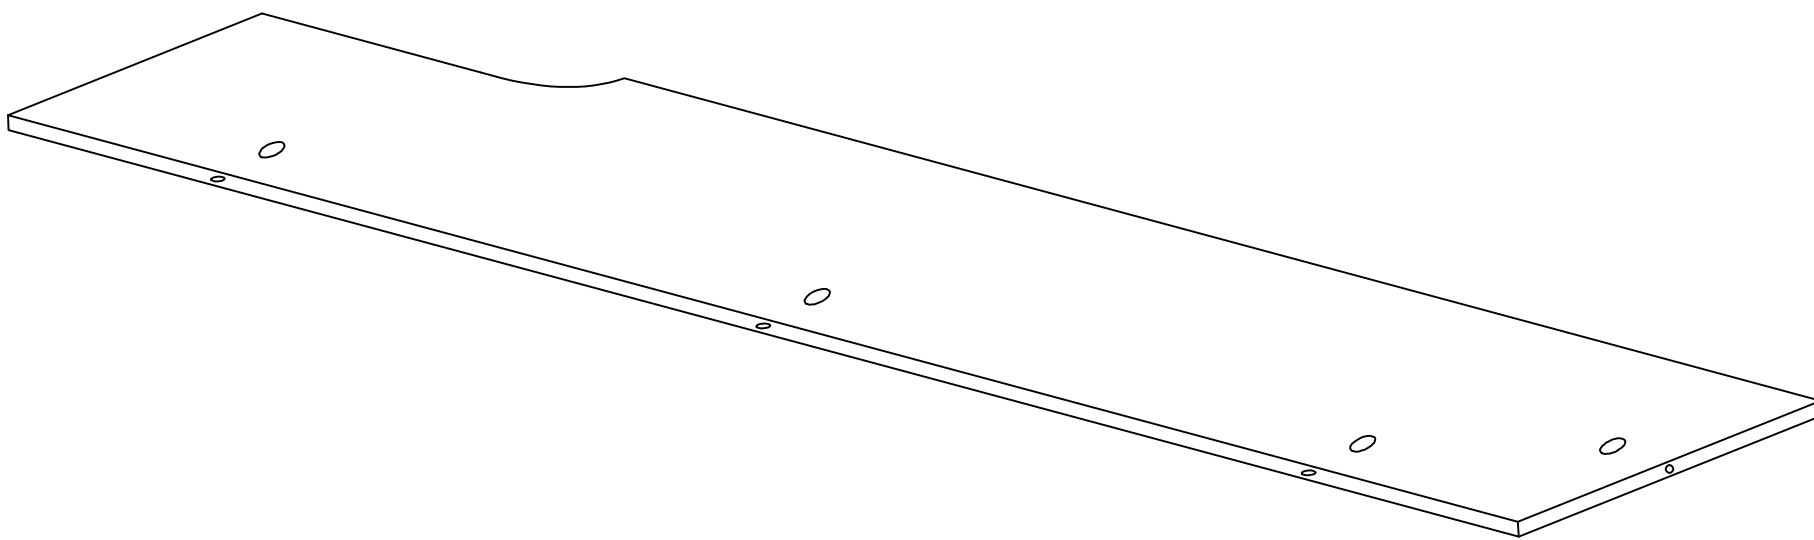


⑦ x1 803*168*12mm

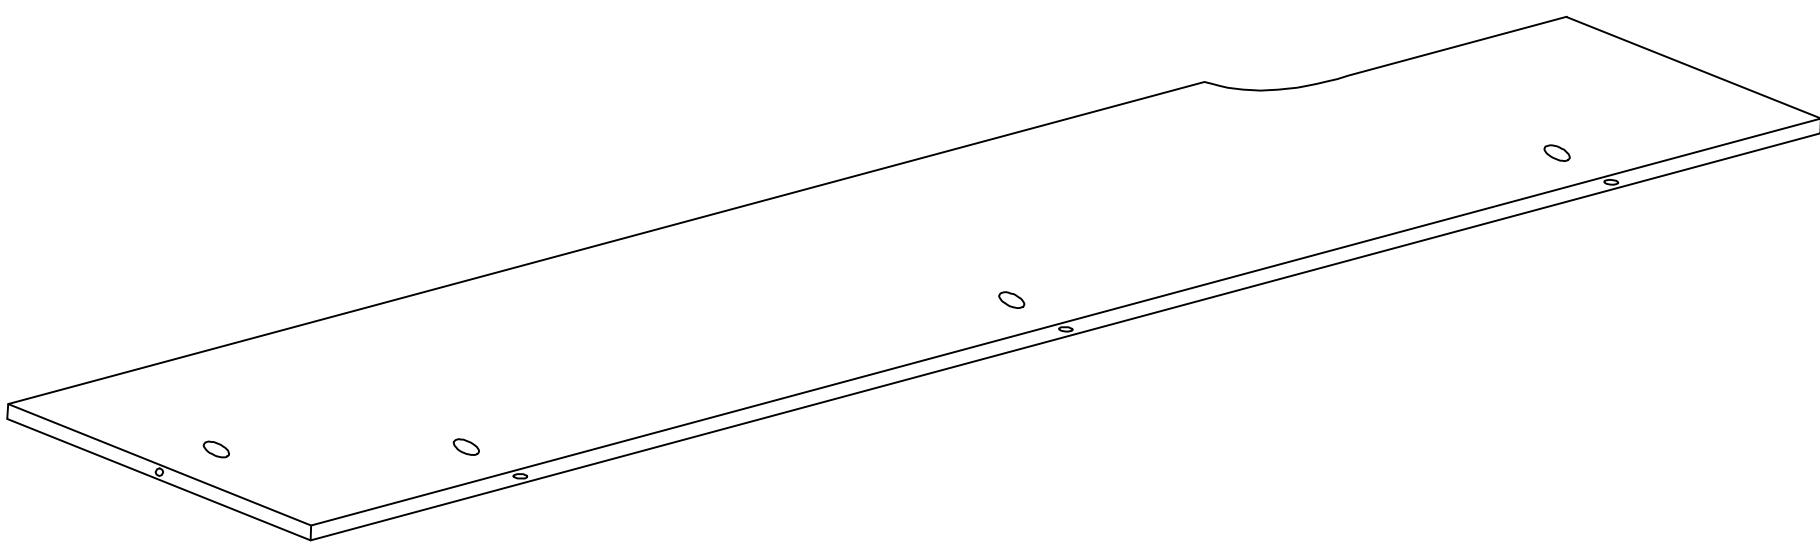


⑧ x1 803*168*12mm

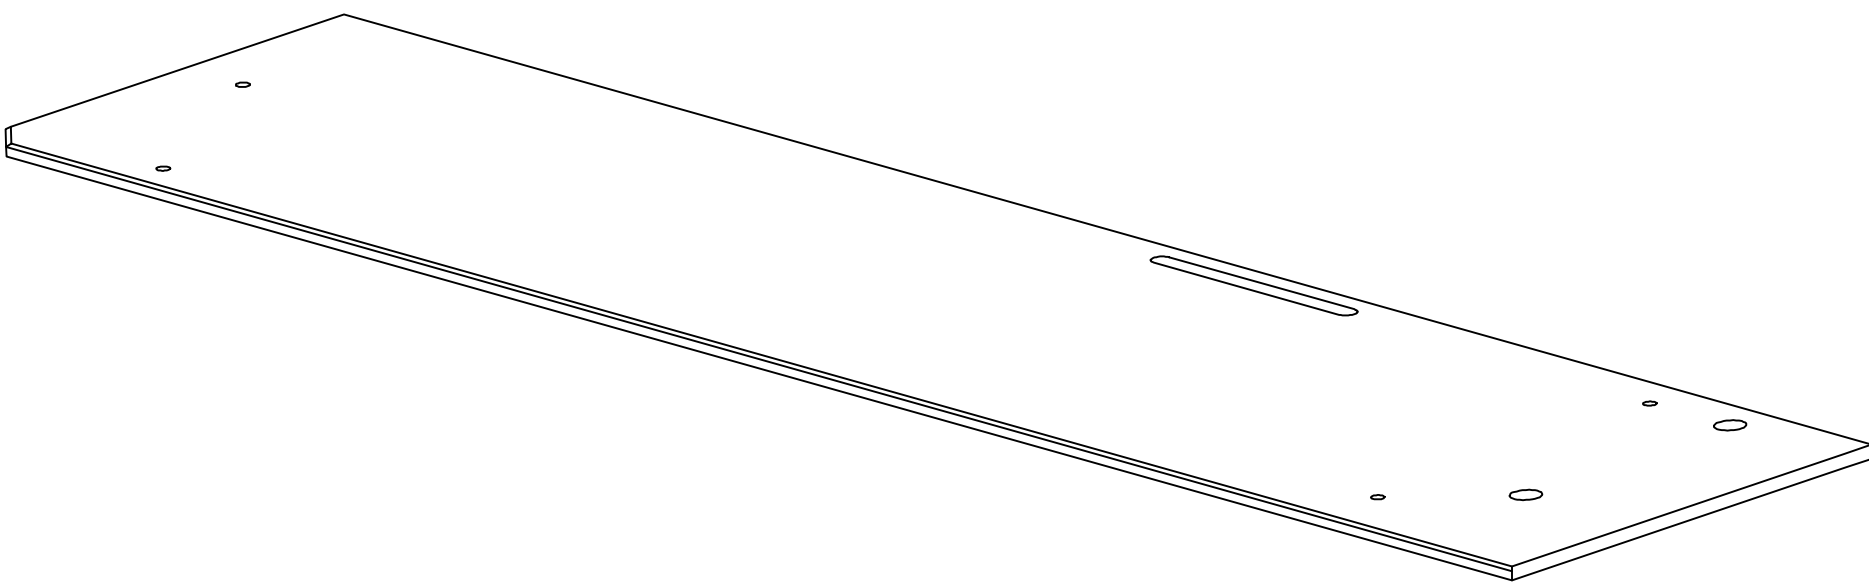


⑨ x1 691*190*12mm

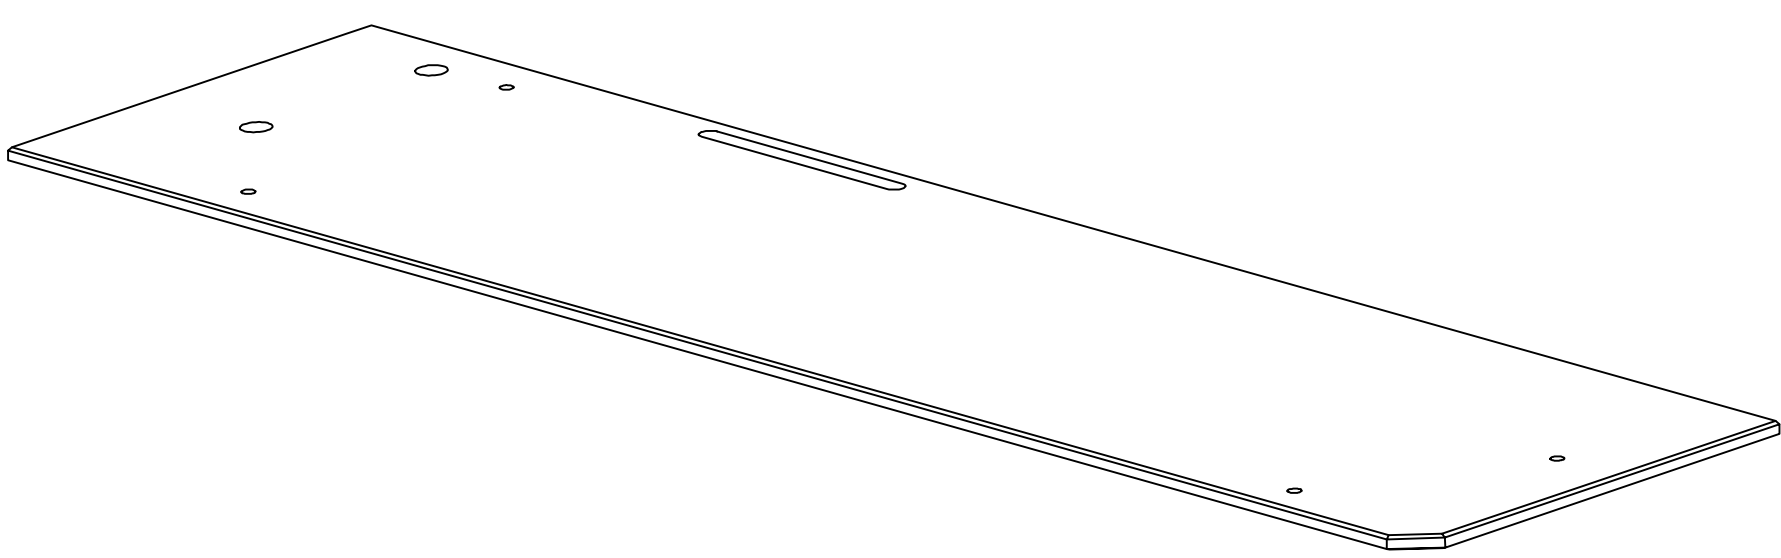


⑩ x1 691*190*12mm

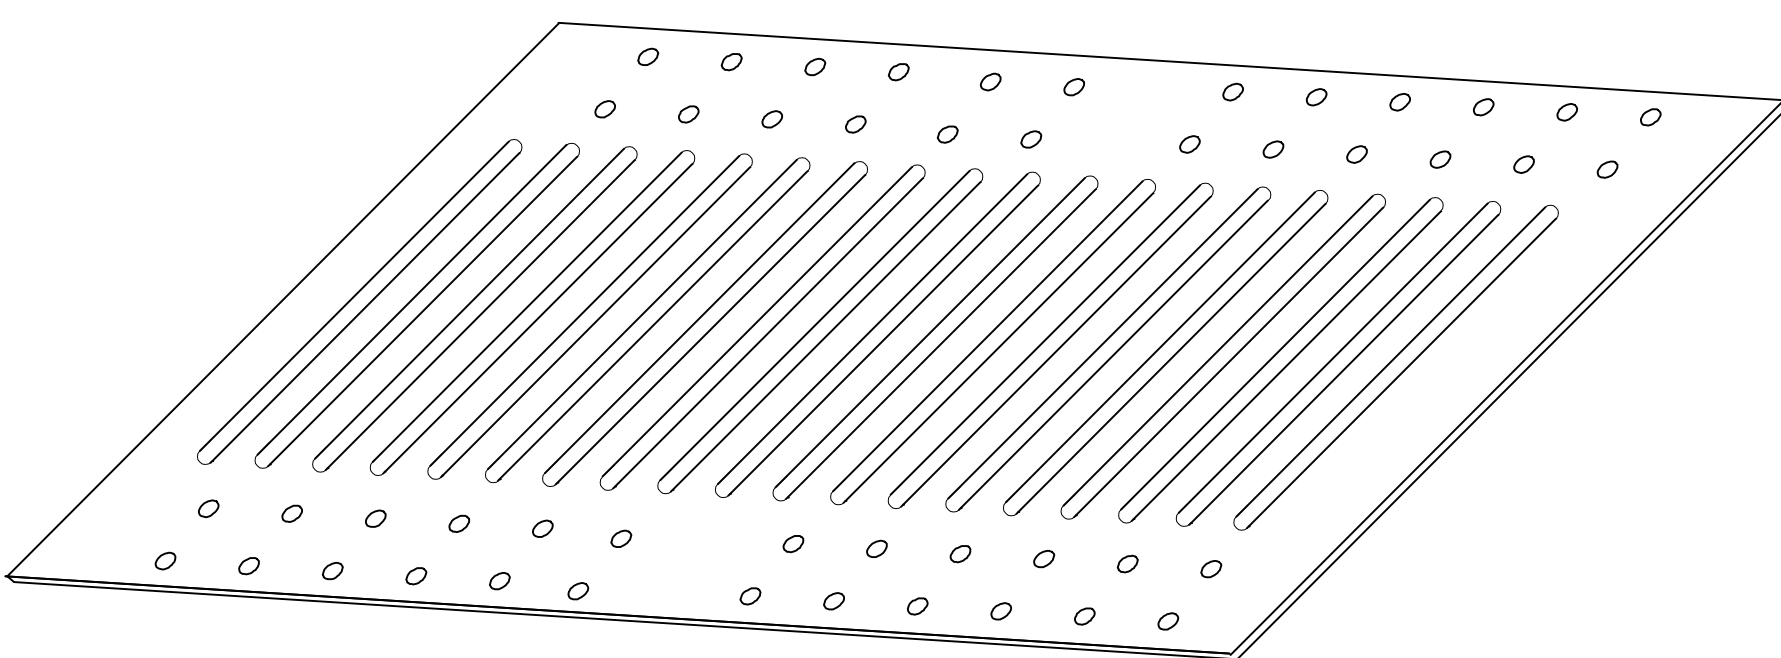


⑪ x1 850*649*12mm

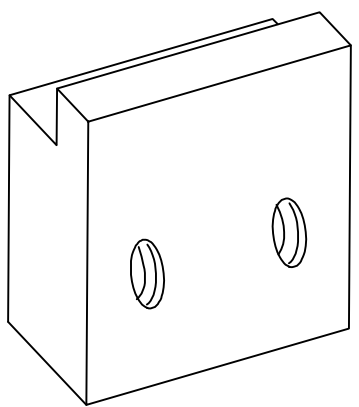

Ax2

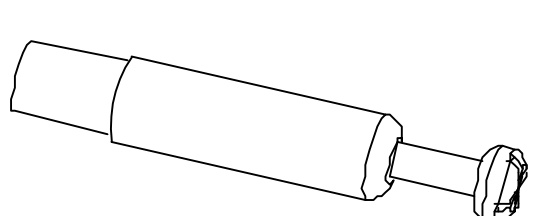


Bx14

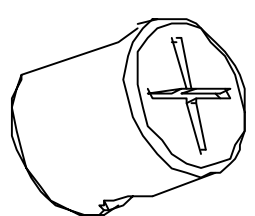


Cx14




Dx8

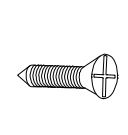


Ex14




Fx4

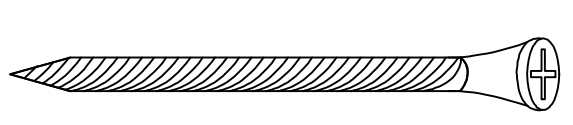


Gx4

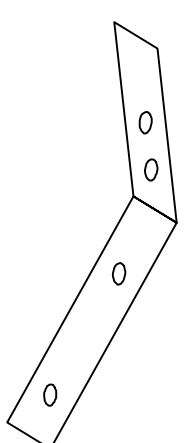


Hx2



Ix8

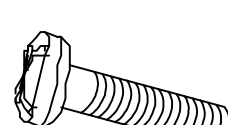

Jx12

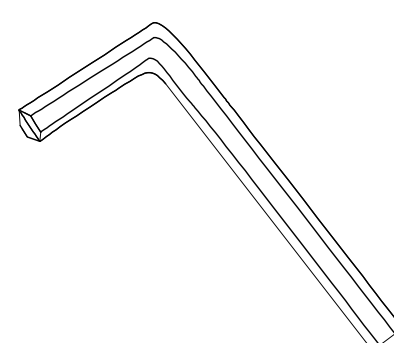

Kx1



Using a screwdriver,screw in the #B screws securely.Please do not over tighten as it may cause wood to splinter.
The small arrow on the #C Cam Locking Screw should be facing the #B screws extending from the panel.
Use screwdriver to tighten securely,but avoid over tightening,screws may protrude through the panel.

	1 Bx6 Cx6	2 Bx4 Cx4 Dx8
	3 Ex14	4 Kx1 Jx8
	5 Jx4 Kx1	6 Bx4 Cx4
	7 Hx2 Ix8 Kx1	8 Ax2 Fx4 Gx4
	9	