

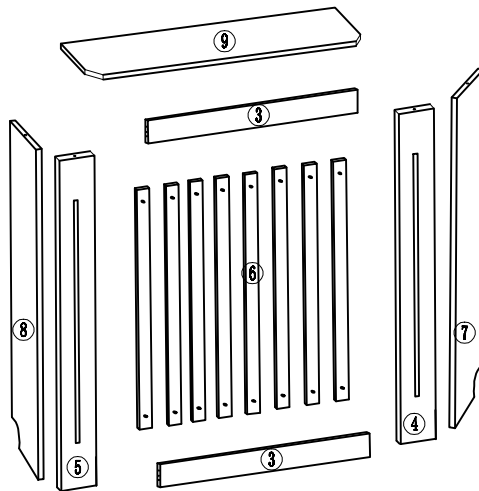



Instruction Manual

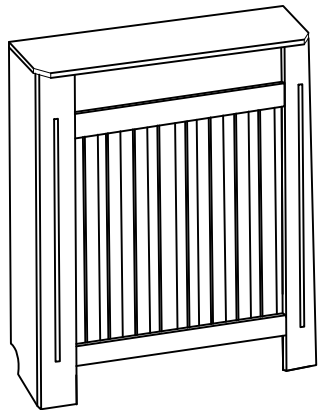


Tools needed



churn drill




hammer




cross screwdriver


Please note that there is no No.1 and No.2 panel !



③ x2 527*105*12mm

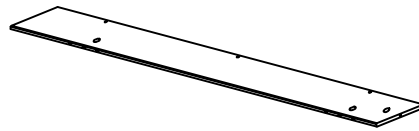


④ x1 803*110*12mm

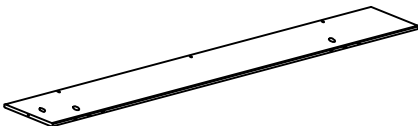


⑤ x1 803*110*12mm




⑥ x8 499*37*5mm

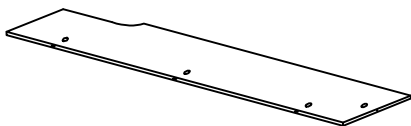

⑦ x1 803*168*12mm

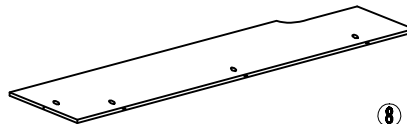

⑧ x1 803*168*12mm

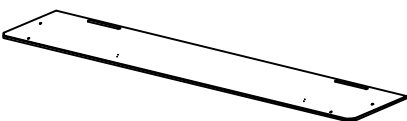

⑨ x1 780*190*12mm




Ax2



Bx14




Cx14



Dx8



Ex16



Fx4



Gx4




Hx2




Ix8



Using a screwdriver, screw in the #B screws securely. Please do not over tighten as it may cause wood to splinter.
The small arrow on the #C Cam Locking Screw should be facing the #B screws extending from the panel.
Use screwdriver to tighten securely, but avoid over tightening, screws may protrude through the panel.

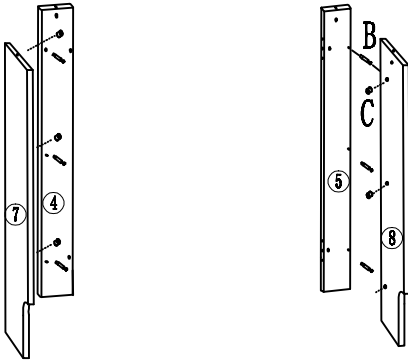


1 2

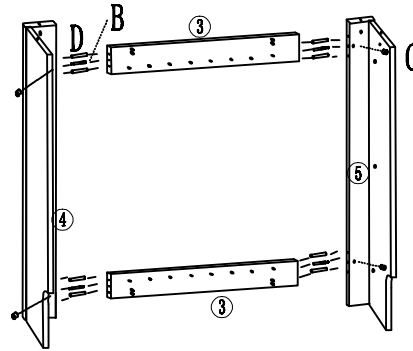


Bx6
Cx6

Bx4
Cx4
Dx8

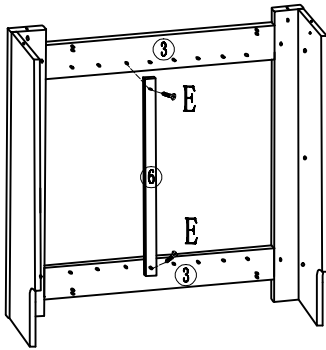


3 4

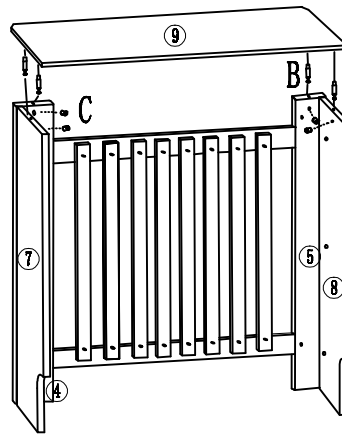


Ex16

Bx4
Cx4

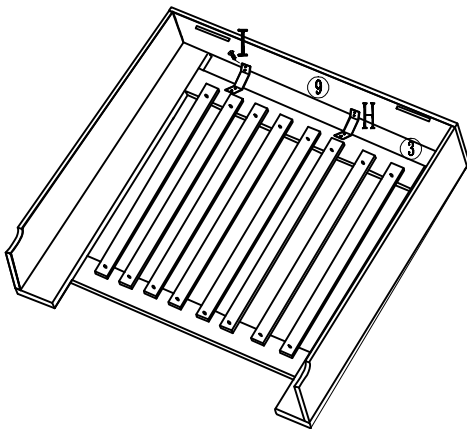


5 6

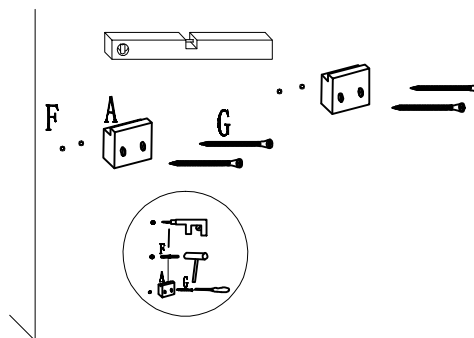

Hx2
Ix8

Ax2
Fx4
Gx4

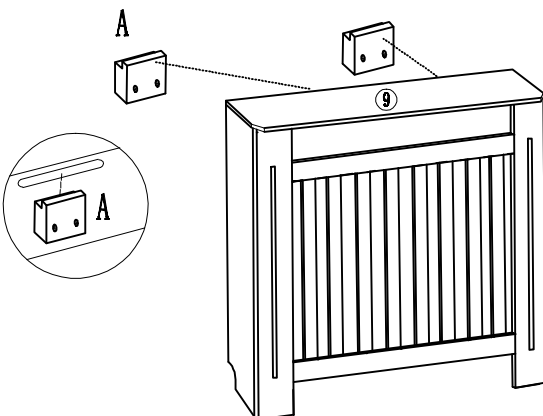

7